


Columns are typically installed in intervals of 9" or 18" on center. Other spacing is available by cutting blocks to desired lengths.

Fill Column and Intermediate Block Cores with Stone or Concrete Per Design (Typical)

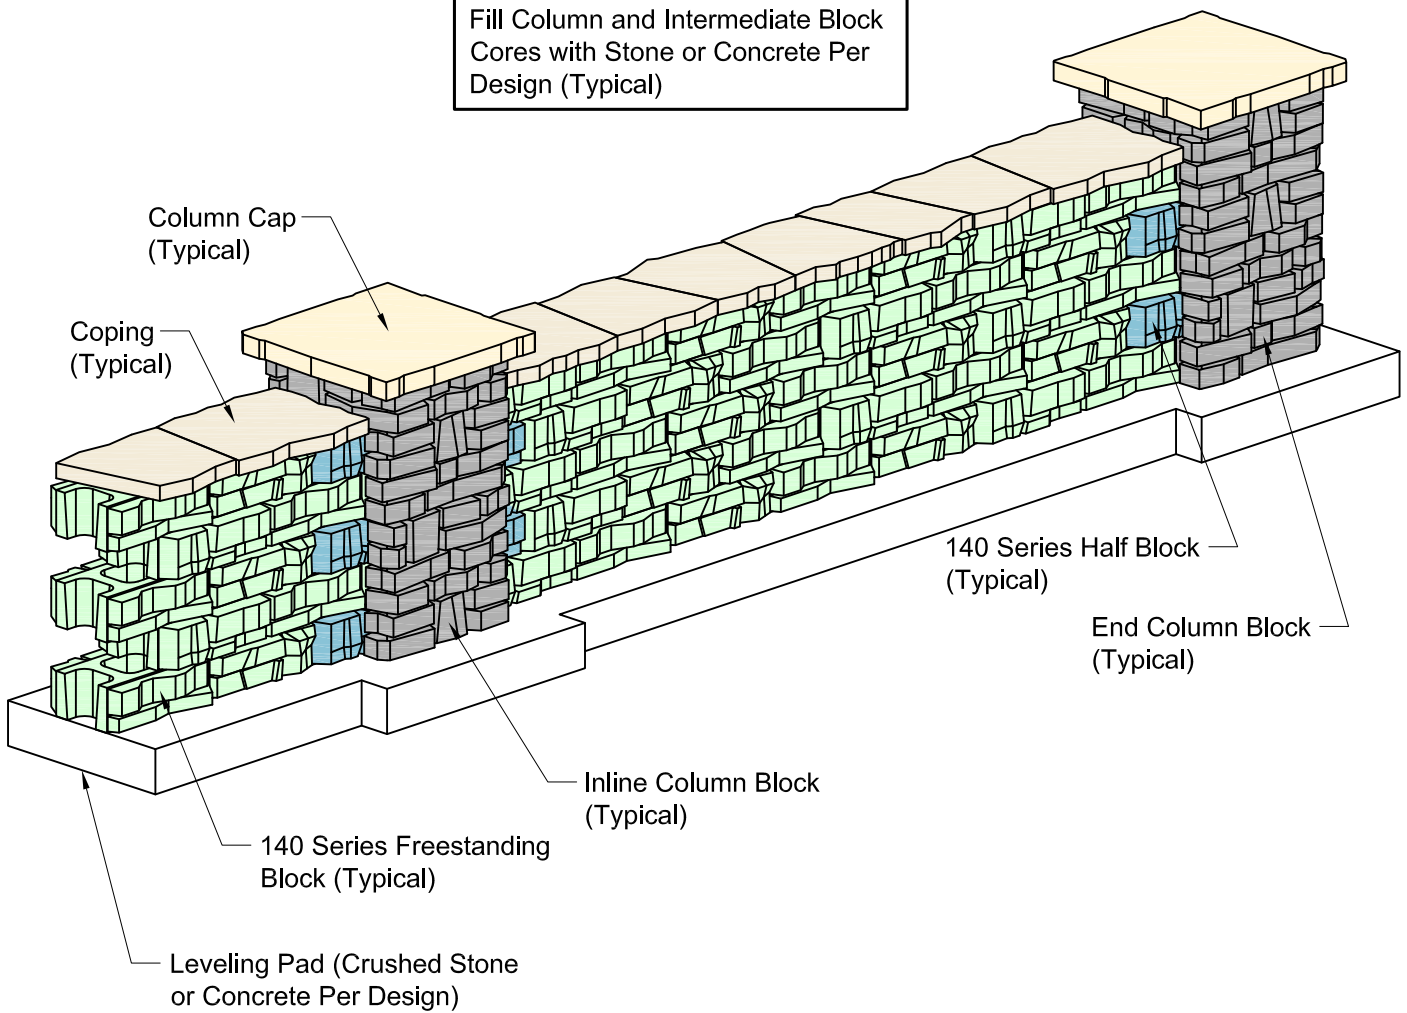

DRAWN BY:
J. Johnson

APPROVED BY:

DATE:
09-10-10

SHEET NO. :
1 of 1

TITLE:

COLUMN INSTALLATION
140 FREESTANDING

DRAWING FILE:
RS 140 Column Installation 091010.dwg



05481 US 31 SOUTH CHARLEVOIX, MI 49720
866-222-8400 • 231-237-9521 Fax • www.redi-scapes.com